MCSTREE

WAYMOON

Support

Send your order number to "619 722 5557"
to get a technical support,
Or anything for help before you turning it.

Clock Camera User Manual

MCSTREE

WAYMOON

Contents

Guiding Video & Customer service ------ Page 1

Product function button introduction ------ Page 2

IOS instruction manual ------ Page 3 to 12

Android instruction manual ------ Page 13 to 21

APP function manual ------ Page 22 to 28

PC instruction manual ------ Page 29 to 33

Questions & Answers ------ Page 34 to 37

Guiding Video Links

For IOS: bit.ly/MCSTREEZ3
For Android: bit.ly/MCSTREET4
For PC: bit.ly/MCSTREEC3

Customer service

E-mail:mcstree@yeah.net
Global support hotline:6197225557 (message only)
Technical support hotline: 6197225557 (message only)

Please contact us if you have any problem with our product. Give us a chance to help you and we will do whatever it takes to make you happy.

Due to our company is based in Hong Kong.
Our working hours is the pacific time 17:00 – 8:00.
We will be responding your message within 5-15 minutes.

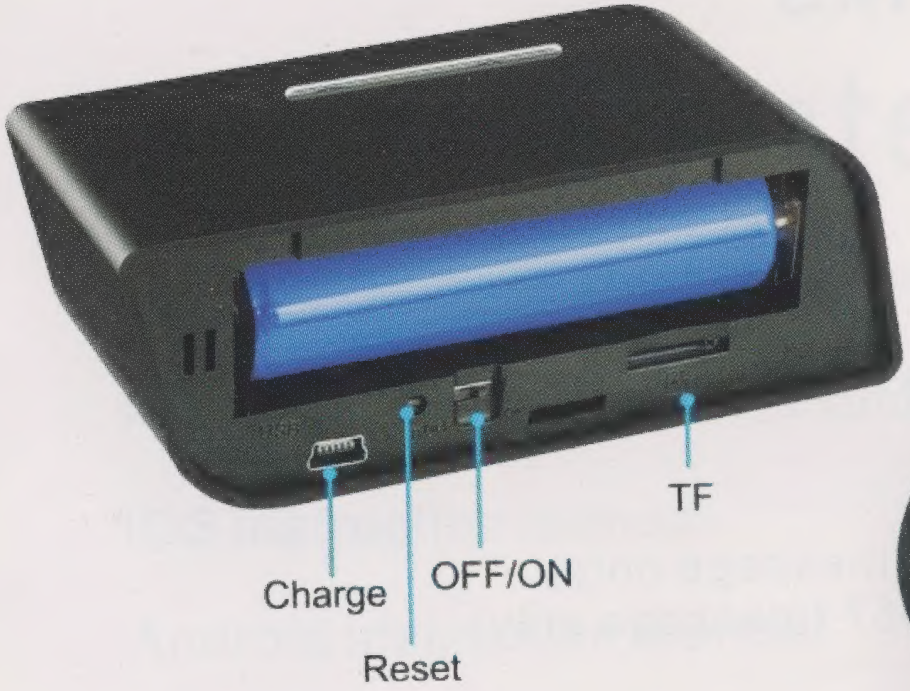

← Model A

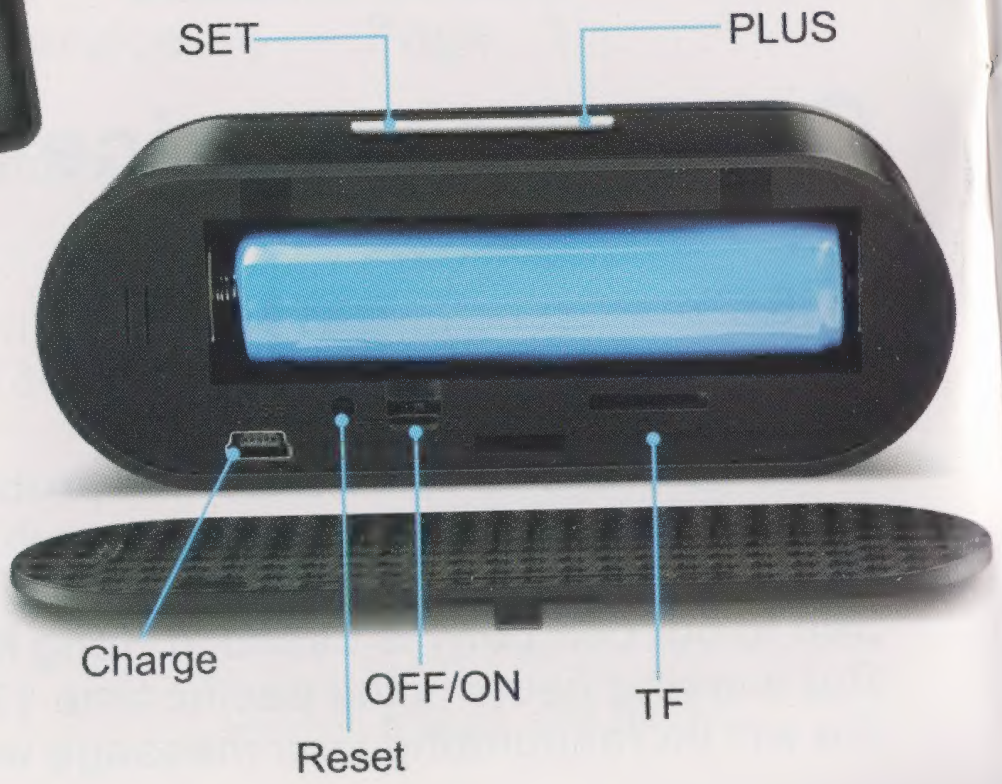

Model B →

IOS INSTRUCTION MANUAL

1. Download the APP

   Download the APP - Android & IOS Phone, Search for APP named "HDMiniCam" in Google Play or Apple Store. Download and install it. Or You can Scan the QR Code to download it.

Q, How to set the correct time on the clock.

A, You need to set the time on the clock itself, there are "SET" and "PLUS" to help you correct the time.

Press "SET" one time for switching 24/12 hours format.

Press "PLUS" and then press "SET" to adjust the time for hour/minute.

2. Turn on the camera

   Step 1: Remove the back cover of the camera to turn it on.

   Step 2: Please get it full charge at the first time use.

   Step 3: When the power is on, you are going to see 2 lights inside of the camera, the blue one means the power is on and the red light stand for the camera wifi is on.

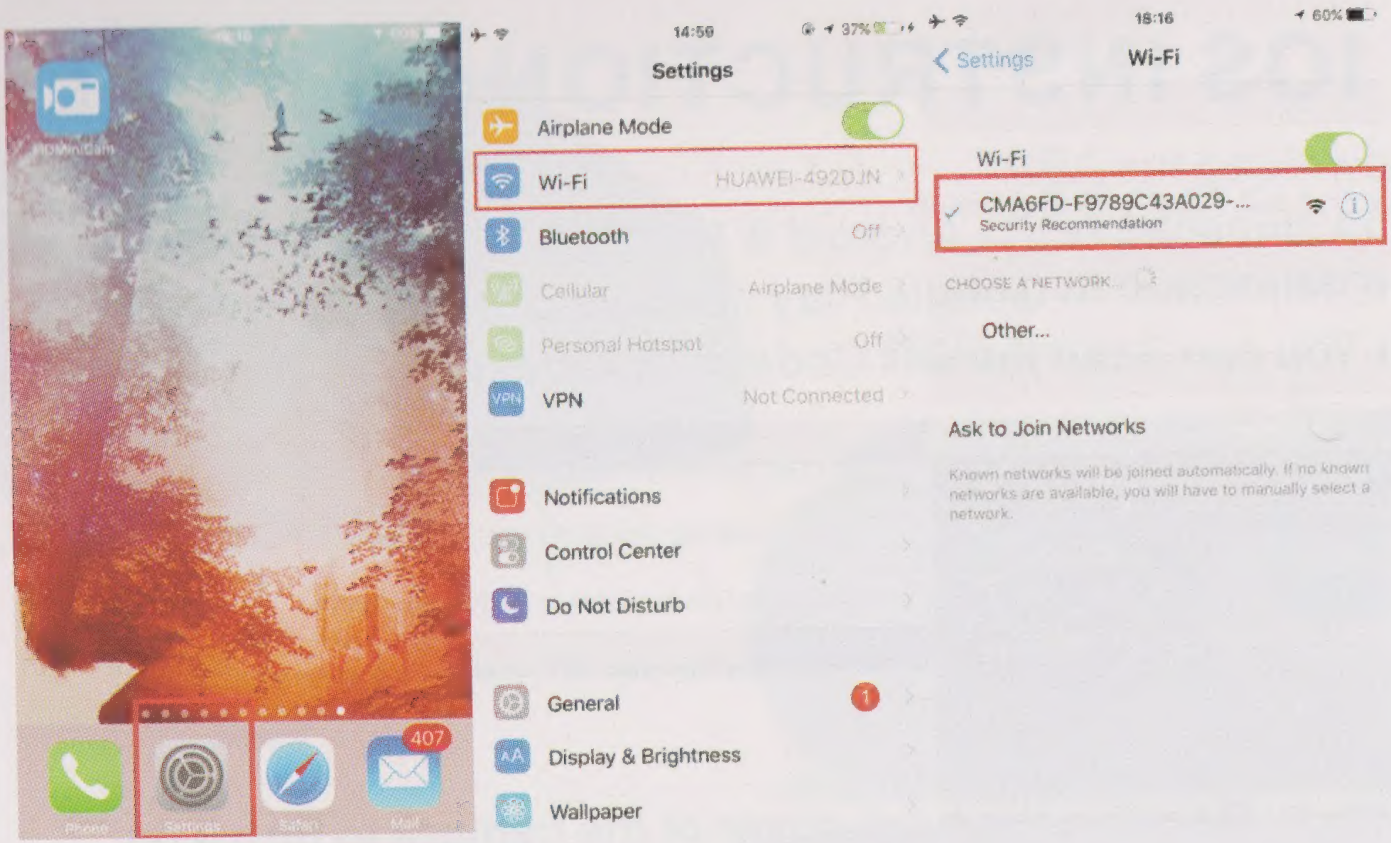

Step 4: Open your Smartphone, go to your phone WI-FI settings to look for the camera WI-FI UID,
For example(CMA6FD-F9789C43A029-...)

Step 5: Wait for 20-40 seconds til the WI-FI show up, then connect it.

Step 6: After the camera WI-FI is successfully connected with your phone, and the WiFi logo displays on the upper left corner. Then you can open the APP Called " HDMiniCam"

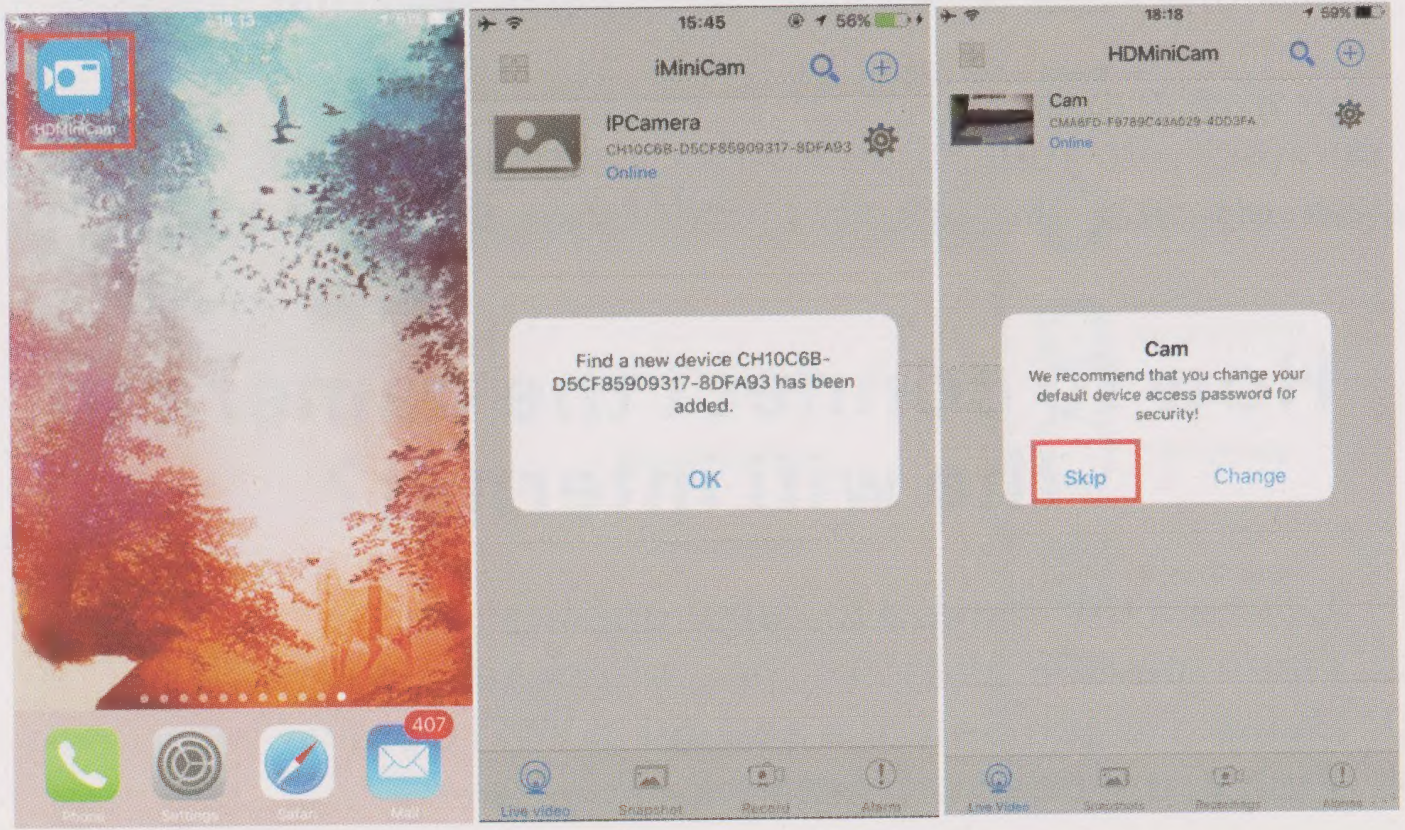

Tip 1: After finishing this process above, you have successfully connected the camera with your cellphone, but currently the video is not live yet because the camera has not connect to the internet <home wifi> , which means you could not keep your cellphone so far away from the camera, it will get disconnected.

Tip 2: But what's more important?---You need to help the camera to connect with your home WI-FI(Once you done this, No matter where you are, you can directly monitor your home security).

How to connect the camera to the wifi internet?

Step 1: Connect the camera to cellphone first.
Step 2: Open the APP and click the camera setting sign
Step 3: Select Device Settings and get in WiFi Config.
Step 4: Find your house wifi network.

18:16
60%
HDMiniCam
Cam
CMA6FD-F9789C43A029-4DD3FA
Online
Live Video
Snapshots
Recordings
Alarms

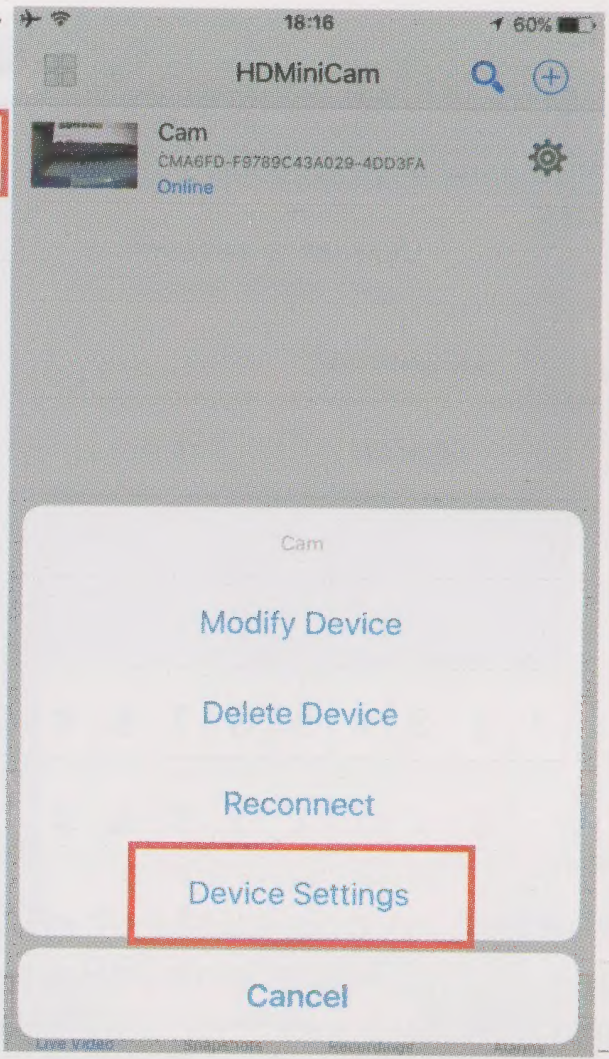
18:16
60%
HDMiniCam
Cam
CMA6FD-F9789C43A029-4DD3FA
Online
Cam
Modify Device
Delete Device
Reconnect
Device Settings
Cancel

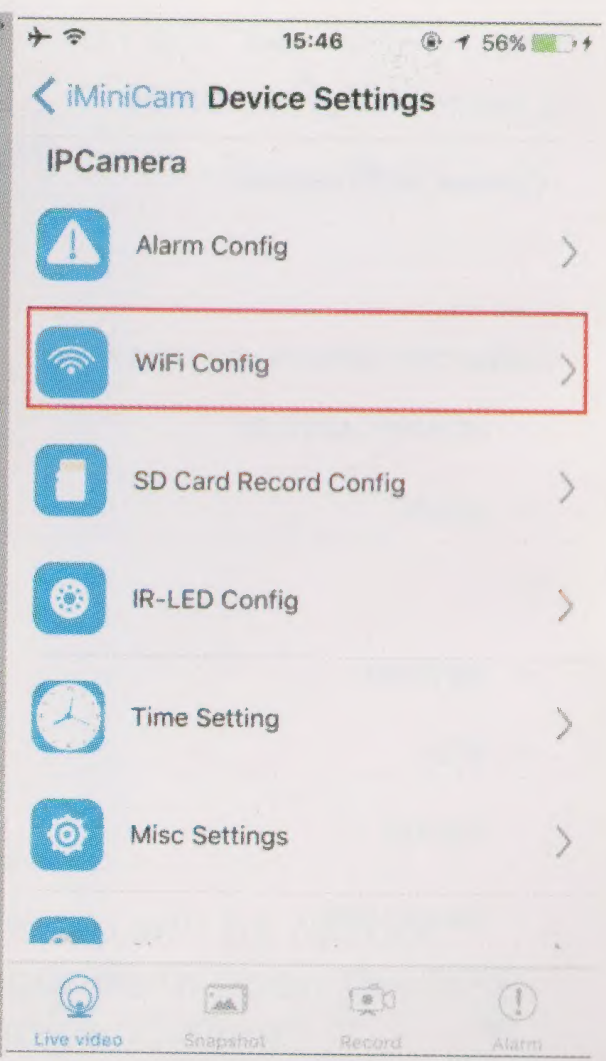
15:46
56%
iMiniCam
Device Settings
IPCamera
Alarm Config
WiFi Config
SD Card Record Config
IR-LED Config
Time Setting
Misc Settings
Live video
Snapshot
Record
Alarm

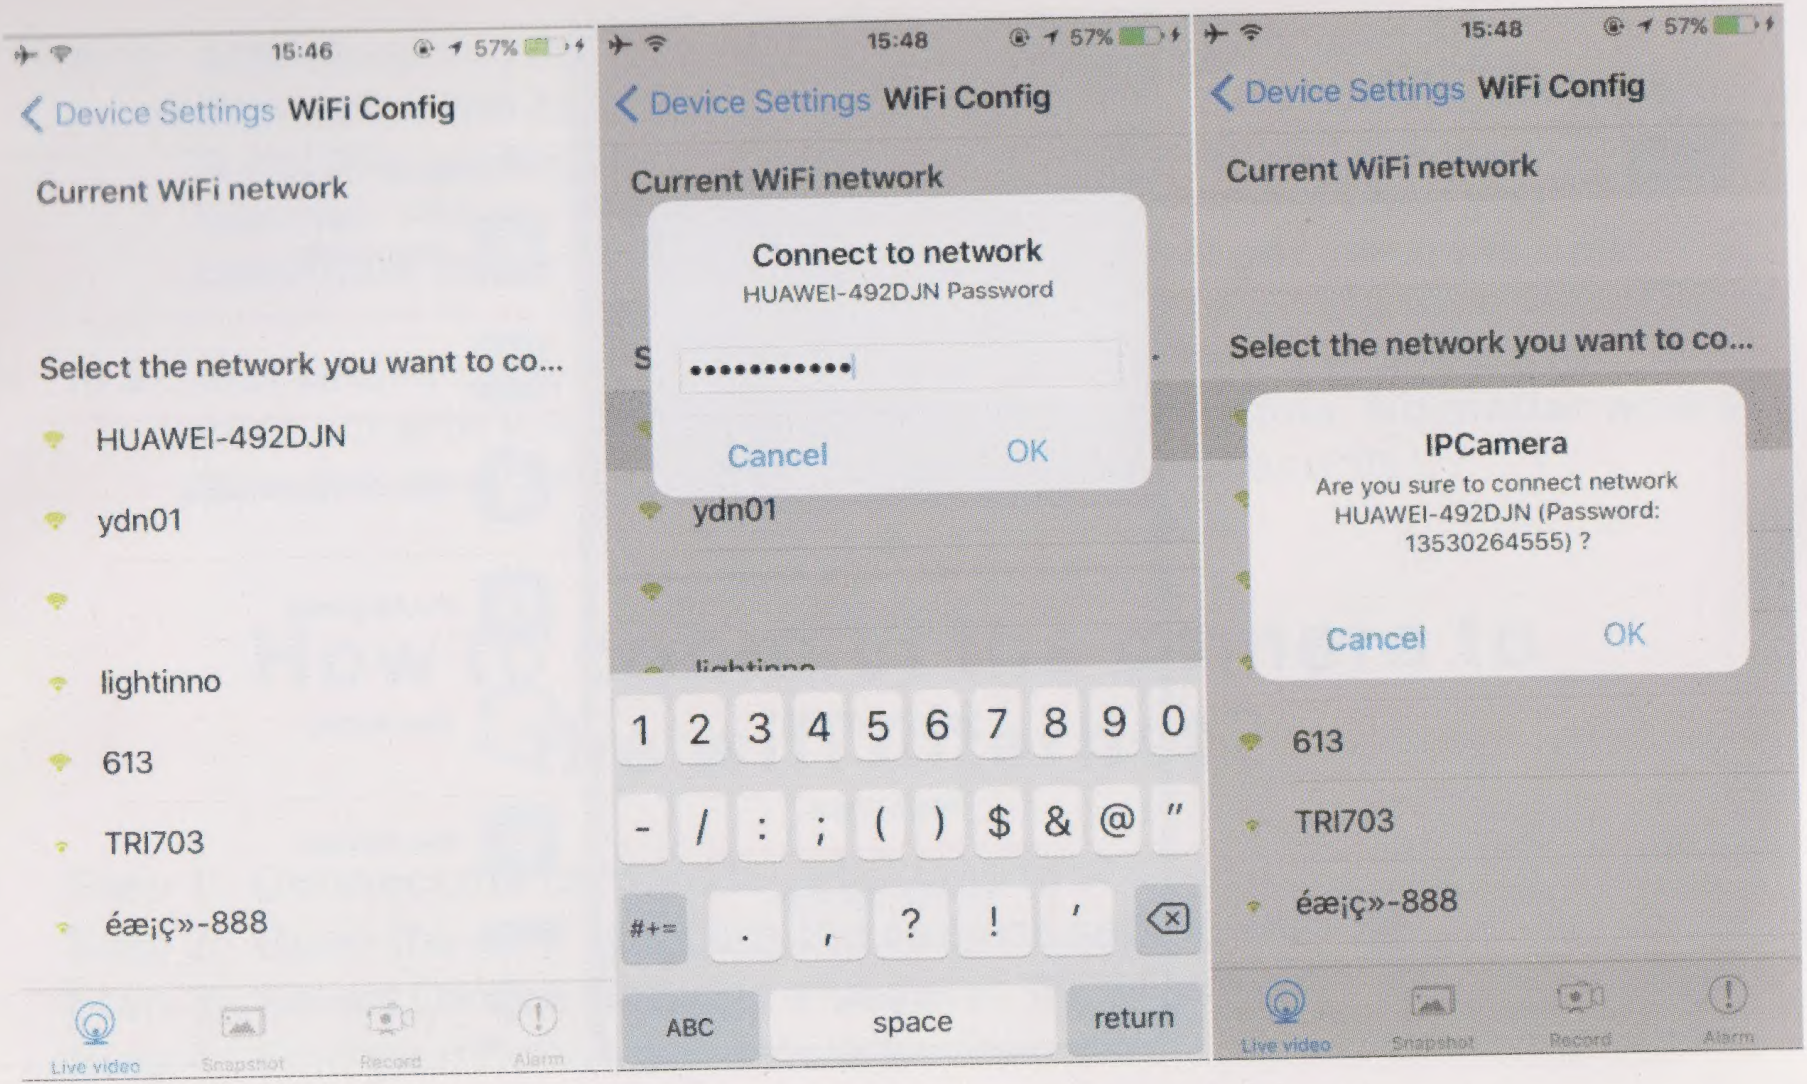
15:46
57%
Device Settings
WiFi Config
Current WiFi network
Select the network you want to co...
HUAWEI-492DJN
ydn01
lightinno
613
TRI703
éæ¡ç»-888
Live video
Snapshot
Record
Alarm
15:48
57%
Device Settings
WiFi Config
Current WiFi network
Connect to network
HUAWEI-492DJN Password
Cancel
OK
ydn01
1 2 3 4 5 6 7 8 9 0
- / : ; ( ) $ & @ "
#+= . , ? ! '
ABC
space
return
15:48
57%
Device Settings
WiFi Config
Current WiFi network
Select the network you want to co...
IPCamera
Are you sure to connect network HUAWEI-492DJN (Password: 13530264555) ?
Cancel
OK
613
TRI703
éæ¡ç»-888
Live video
Snapshot
Record
Alarm

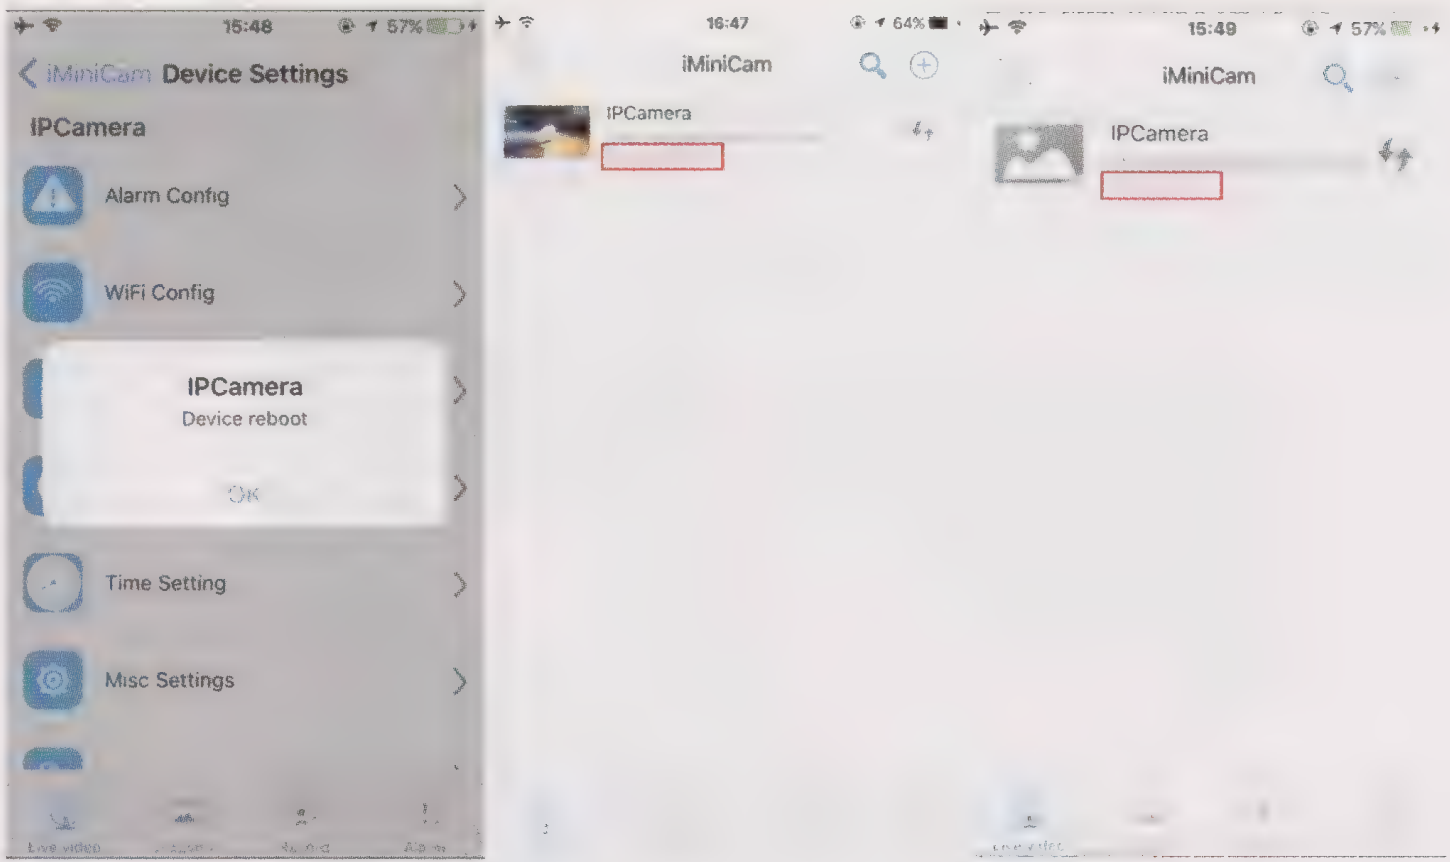

Tip 3: After you done these steps above, the camera will be reboot, please close the APP, and wait 60-120 seconds to open the APP again. or you can wait until the camera shows “Online”.

Q: Why Camera shows “Device Offine” or “Logging in...”

A: Because the camera is connecting with your home WiFi, the process will take about 60-120 seconds.

Q: What if i can’t find my home wifi on the App WiFi List?

A: At the bottom of the WiFi list, there is a “Other Network...” to type in your home WiFi name and Password.

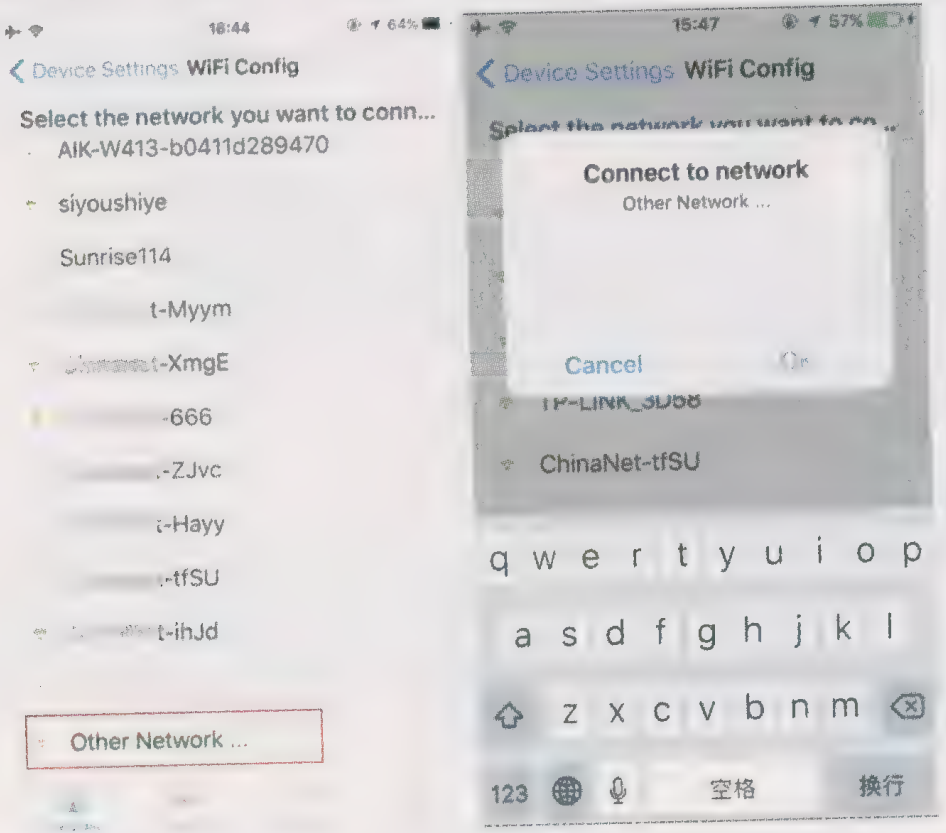

Q: I waited almost 5 minutes, but it still shows up “Device Offine” or “Logging in...”

A: That is because you might type the wrong WiFi password, you need to Reset the camera. There is a litter button on the back side of the camera. Please find a pen to press it for 5-10 seconds, until the camera inside red and blue lights are off and on again. And please do all process above again to reconnect.

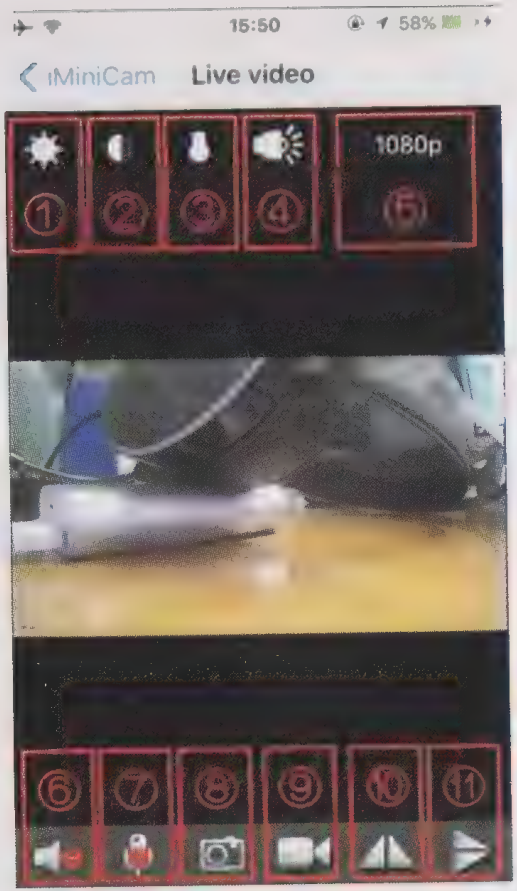

① Adjust the brightness ② Adjust the contrast ③ Turn on the night vision
④ Turn on/off the lights inside the camera ⑤ Adjust pixels ⑥ Turn on Speaker
⑦ One-way reception sound ⑧ Take photo ⑨ Record Video
⑩ Screen up and down Screen left and right

ANDROID INSTRUCTION MANUAL

1. Download The APP
   Download the APP - Android & IOS Phone, Search for APP named "HDMiniCam" in Google Play or Apple Store. Download and install it. Or You can Scan the QR Code to download it.

Q, How to set the correct time on the clock.

A, You need to set the time on the clock itself, there are "SET" and "PLUS" to help you correct the time.

Press "SET" one time for switching 24/12 hours format..

Press "PLUS" and then press "SET" to adjust the time for hour/minute.

2. Turn on the camera
   Step 1: Remove the back cover of the camera to turn it on.
   Step 2: Please get it full charge at the first time use.
   Step 3: When the power is on, you are going to see 2 lights inside of the camera, the blue one means the power is on and the red light stand for the camera wifi is on.

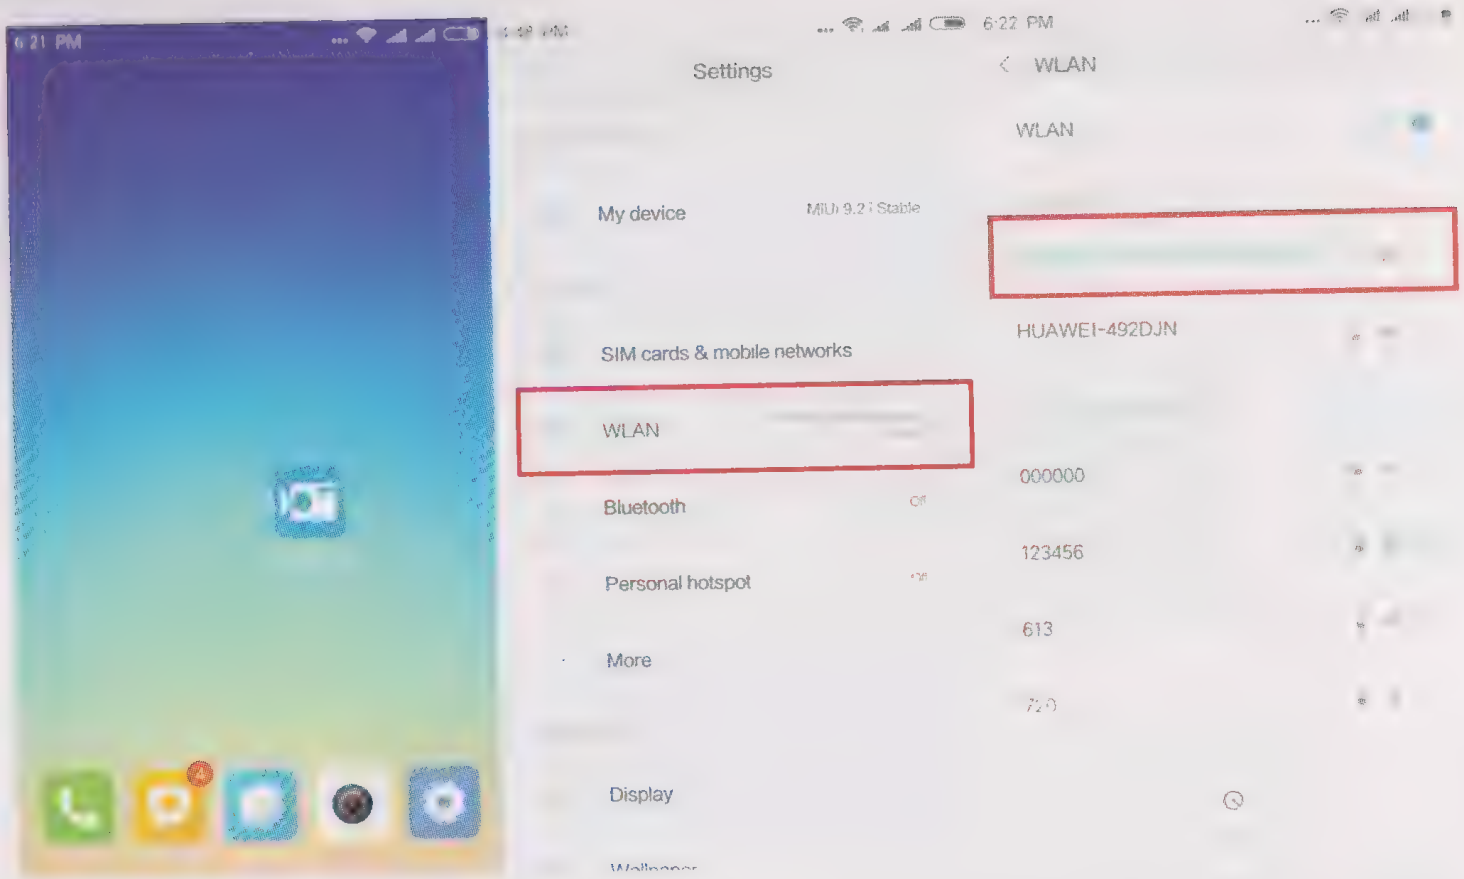

Step 4: Open your Smartphone , go to your phone WI-FI settings to look for the camera WI-FI UID,
For Example(CMA6FD-F9789C43A029-...)

Step 5: Wait for 20-40 seconds til the WI-FI show up, then connect it.

Step 6: After the camera WI-FI is successfully connected with your phone, and the WiFi logo displays on the upper left corner. Then you can open the APP Called " HDMiniCam "

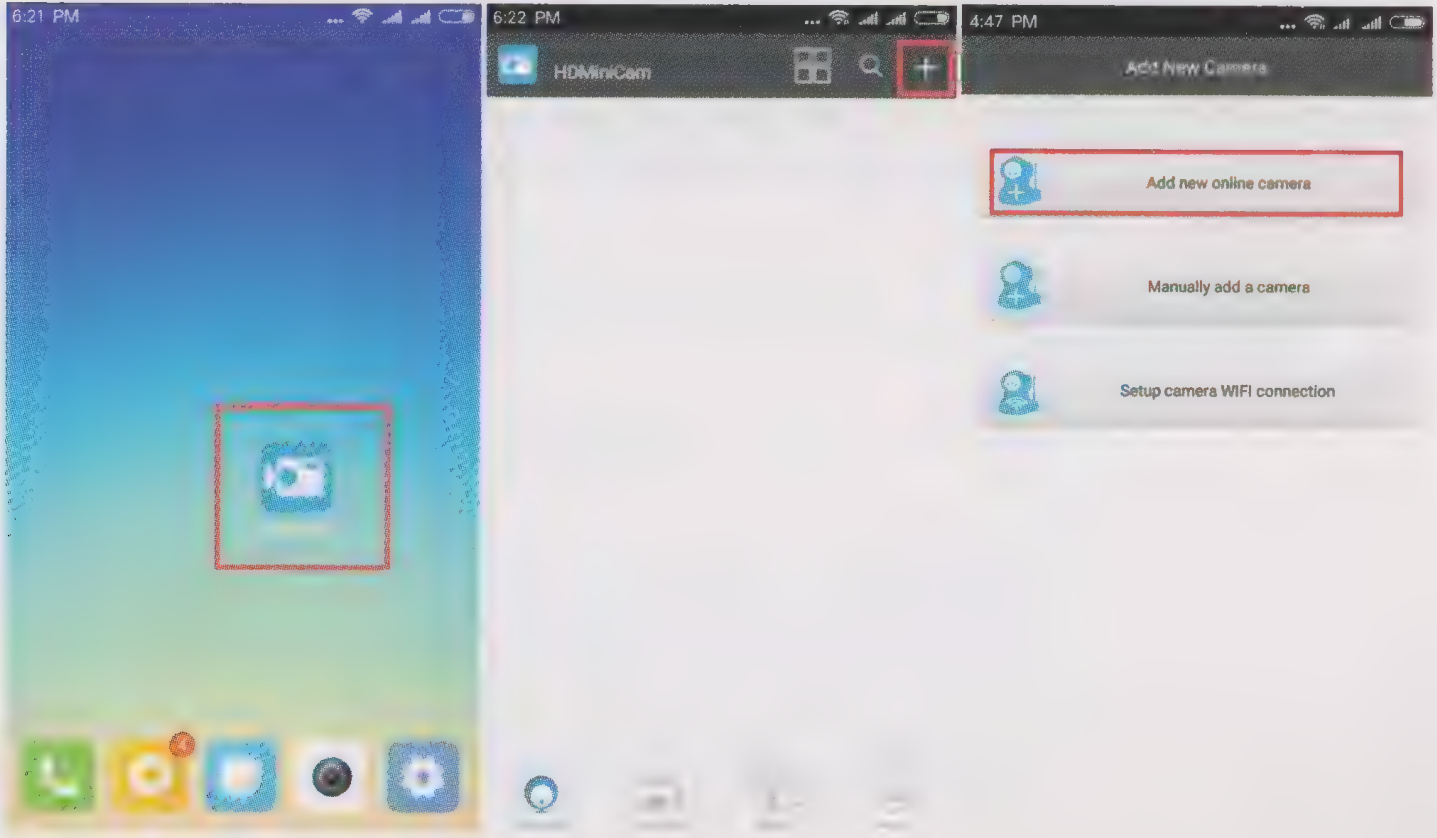

Tip 1: After finishing this process above, you have successfully connected the camera with your cellphone, but currently the video is not live yet because the camera has not connect to the internet<home wifi>, which means you could not keep your cellphone so far away from the camera, it will get disconnected.

Tip 2: But what's more important?----You need to help the camera to connect with your home WI-FI(Once you done this, No matter where you are, you can directly monitor your home security).

How to connect the camera to the wifi internet?

Step 1: Connect the camera to cellphone first.
Step 2: Open the APP and click the camera setting sign
Step 3: Select Device Settings and get in WiFi Config.
Step 4: Find your house wifi network.

6:23 PM
HDMiniCam
Cam
Online

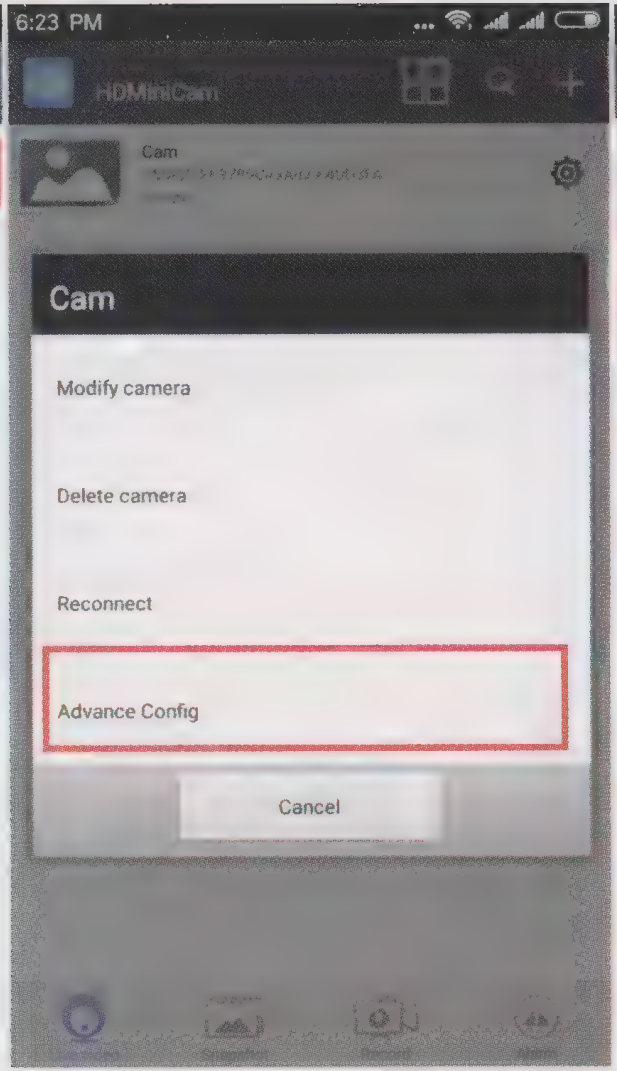
6:23 PM
HDMiniCam
Cam
Cam
Modify camera
Delete camera
Reconnect
Advance Config
Cancel

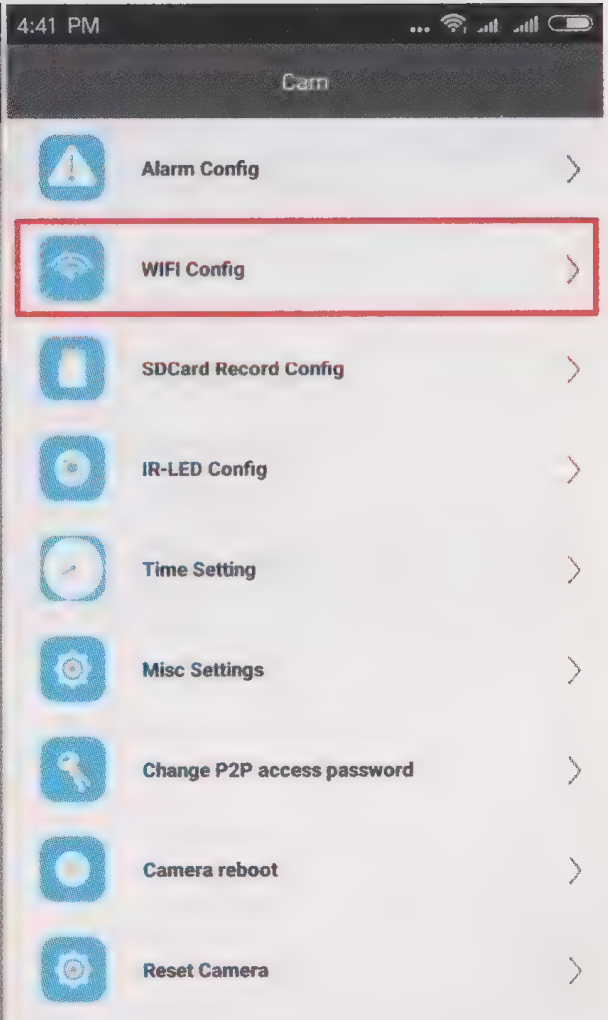
4:41 PM
Cam
Alarm Config
WIFI Config
SDCard Record Config
IR-LED Config
Time Setting
Misc Settings
Change P2P access password
Camera reboot
Reset Camera

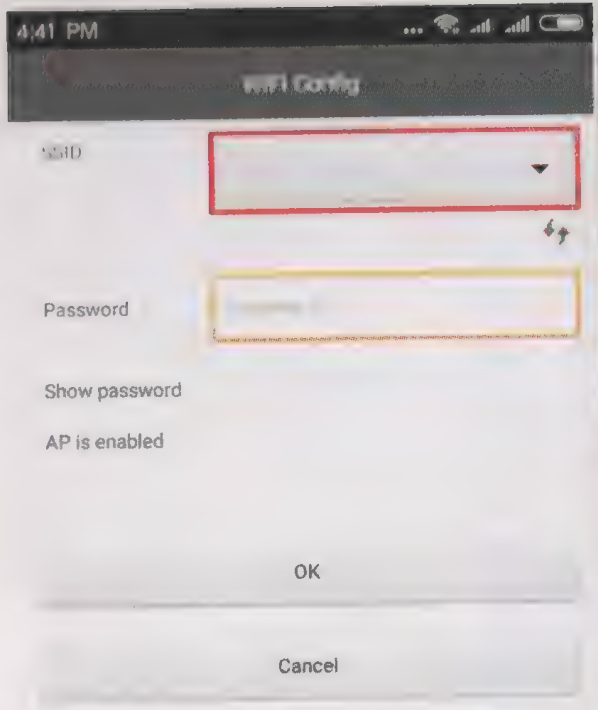
4:41 PM
SSID
Password
Show password
AP is enabled
OK
Cancel

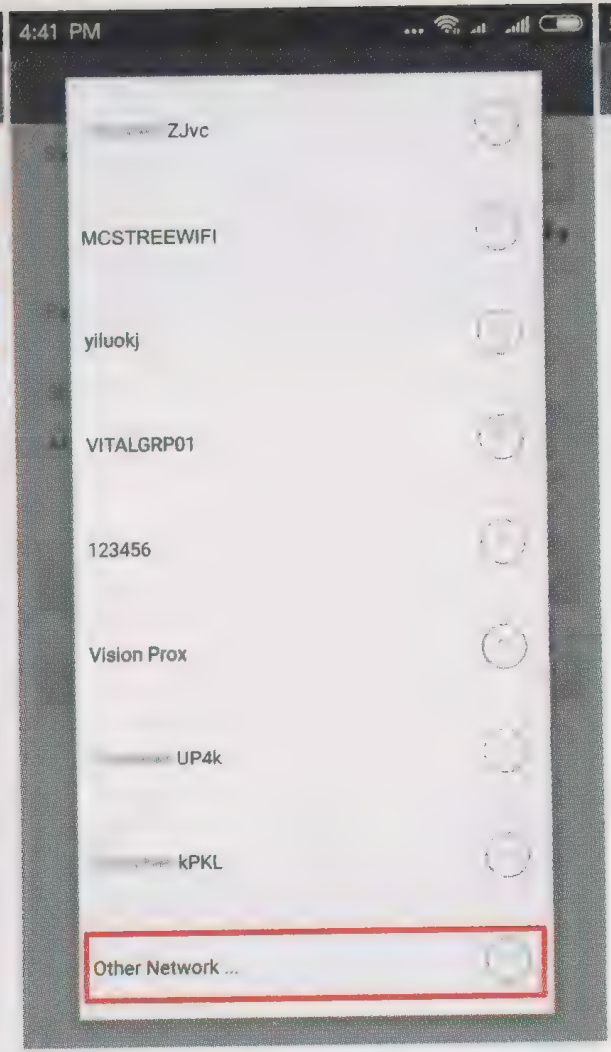
4:41 PM
ZJvc
MCSTREEWIFI
yiluokj
VITALGRP01
123456
Vision Prox
UP4k
kPKL
Other Network ...

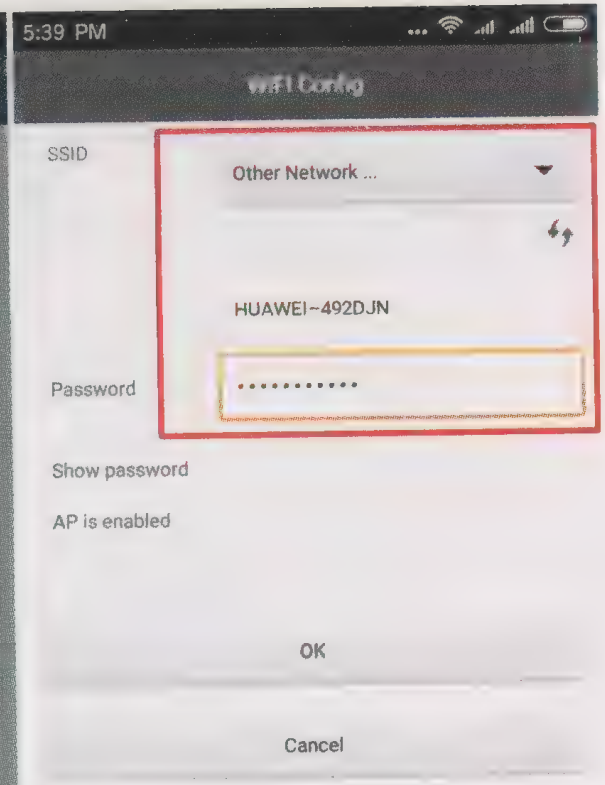
5:39 PM
SSID
Other Network ...
HUAWEI-492DJN
Password
Show password
AP is enabled
OK
Cancel

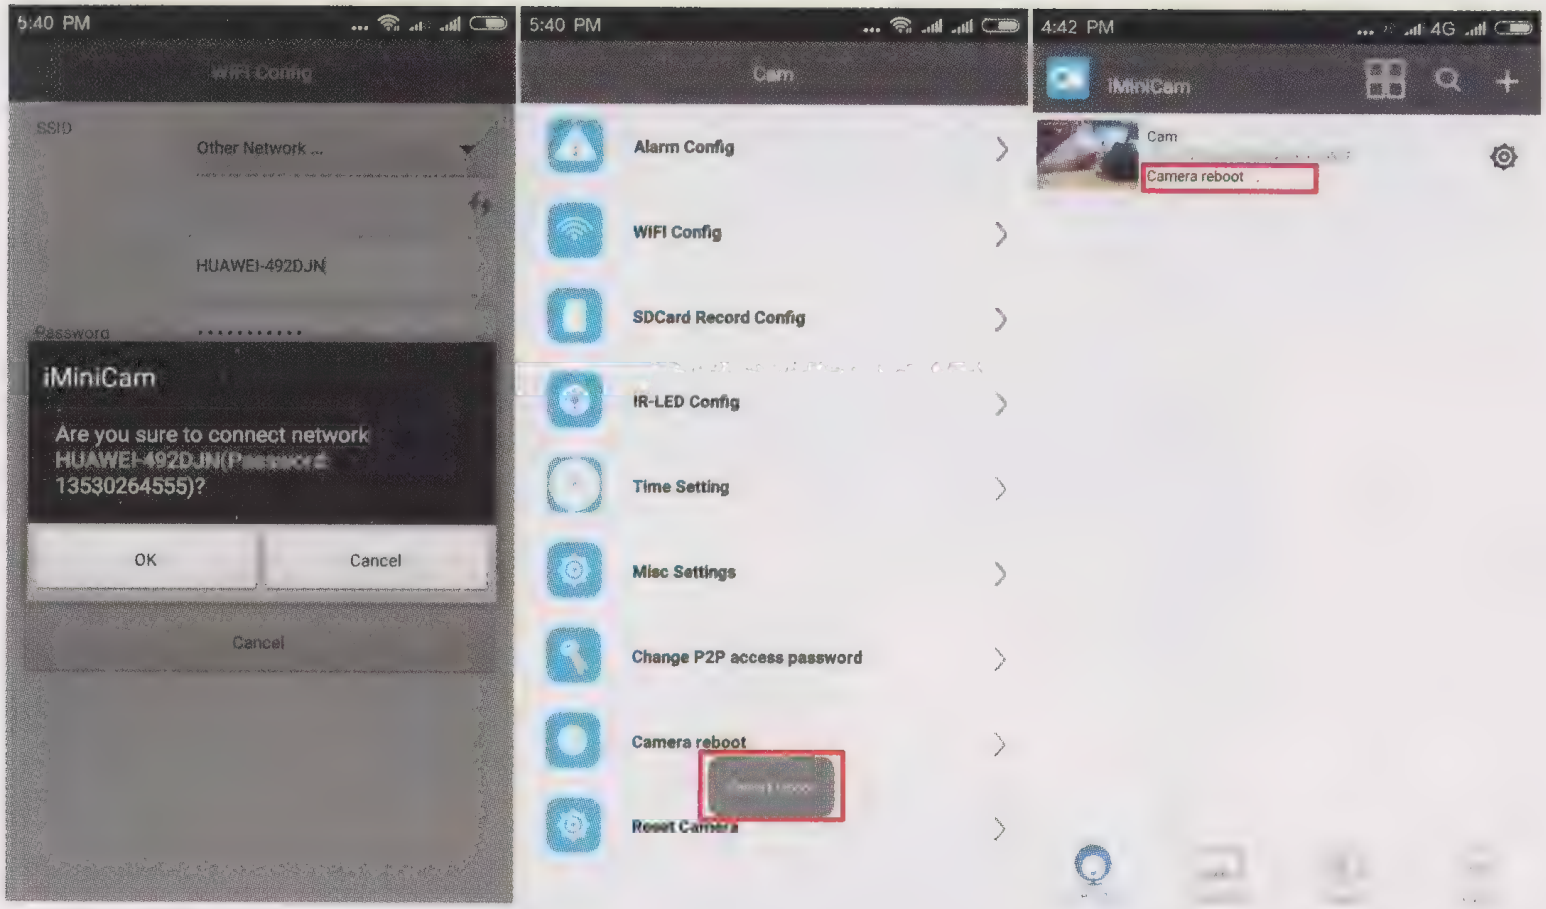

Tip 3: After you done these steps above, the camera will be reboot, please close the APP, and wait 60-120 seconds to open the APP again. or you can wait until the camera shows “Online”.

Q: Why Camera shows “Device Offine” or “Logging in...”

A: Because the camera is connecting with your home WiFi, the process will take about 60-120 seconds.

Q: What if i can’t find my home wifi on the App WiFi List?

A: At the bottom of the WiFi list, there is a “Other Network...” to type in your home WiFi name and Password.

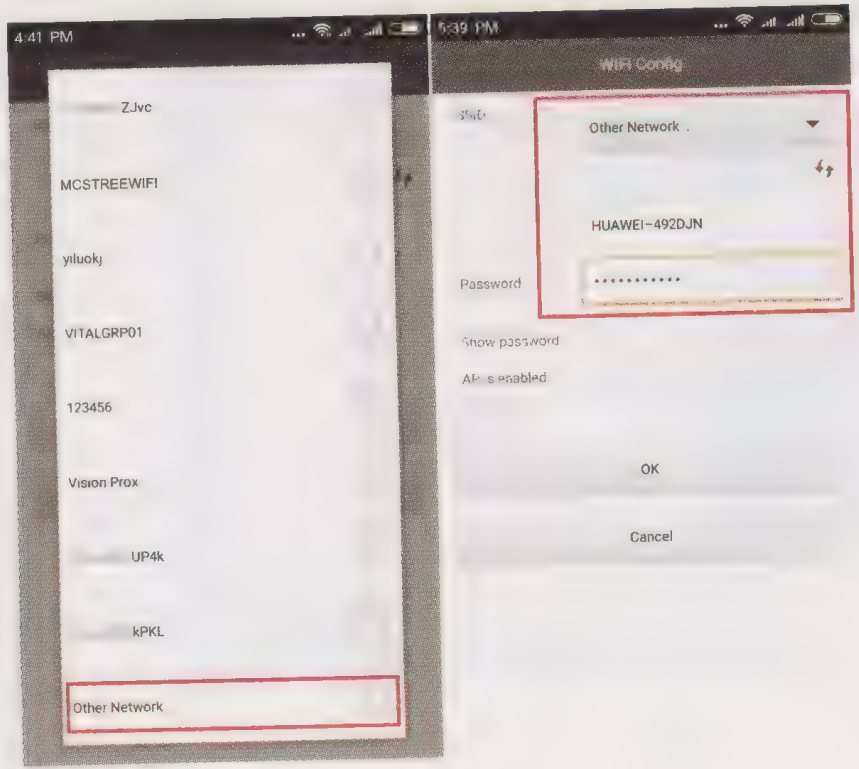

Q: I waited almost 5 minutes, but it still shows up “Device Offine” or “Logging in...”

A: That is because you might type the wrong WiFi password, you need to Reset the camera. There is a litter button on the back side of the camera. Please find a pen to press it for 5-10 seconds, until the camera inside red and blue lights are off and on again. And please do all process above again to reconnect.

APP FUNCTION MANUAL

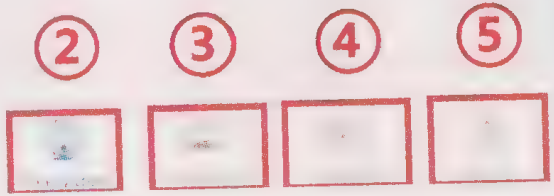

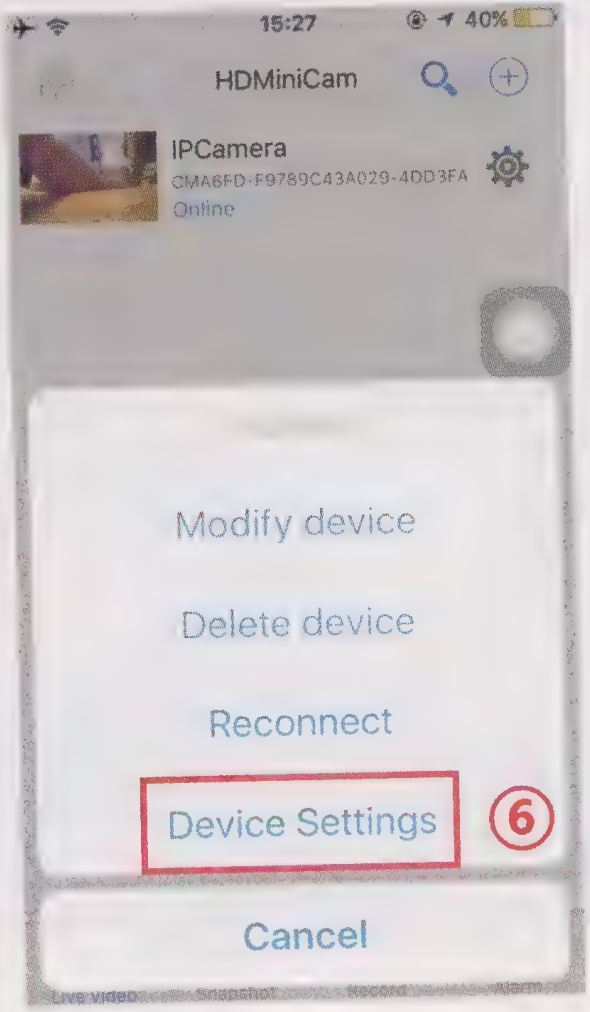

① For the camera settings.

② Checking live video.

③ See the photos you took.

④ See the video both from the phone and sd card.

⑤ See the snapshot that took by motion detection.

⑥ All settings for the device.

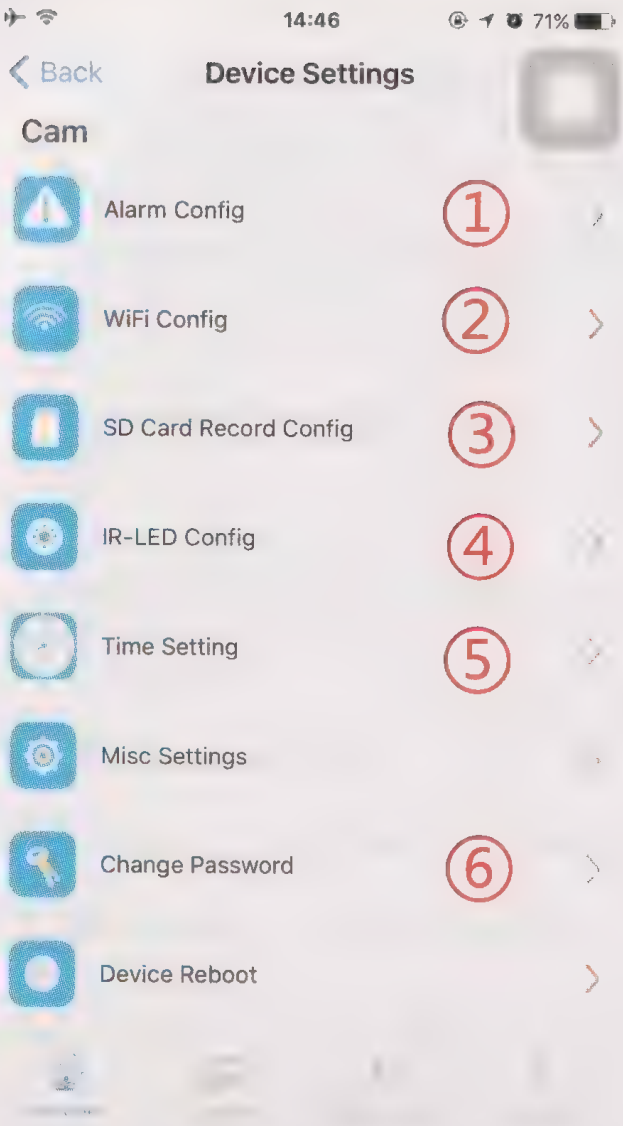

① For setting up motion detection.

② For connecting the camera your house wifi

③ For setting up sd card recording.

④ For setting up the time on the clock.

⑤ For changing the password that get into the camera. The original password is 8888

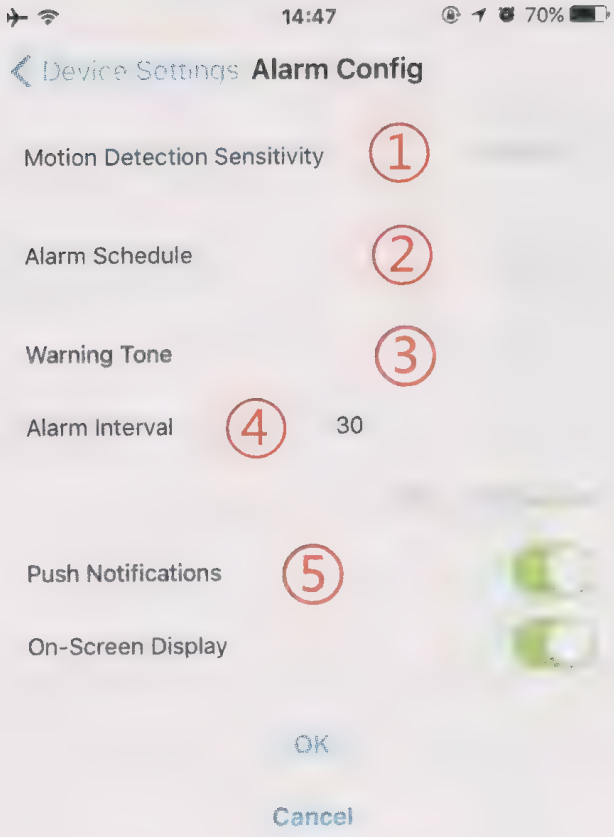

① For turning on the motion detection. We suggest choosing standard level.

② For setting a certain period of time to turn on the motion detection.

③ For turning on the warning tone when any motion detected.

④ To set the interval for each time alarm of motion detection.

⑤ To set the push message when any motion detected. And you also need to set the push message for the app from your phone settings.

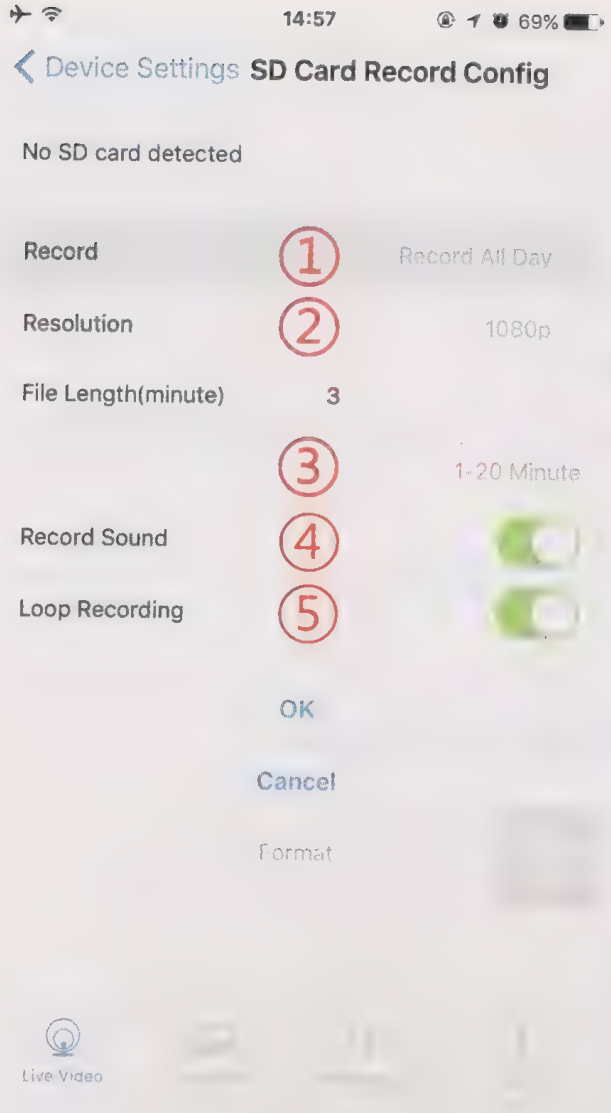
14:57
69%
Device Settings
SD Card Record Config
No SD card detected
Record
Record All Day
Resolution
1080p
File Length(minute)
3
1-20 Minute
Record Sound
Loop Recording
OK
Cancel
Format
Live Video

14:57
69%
Device Settings
SD Card Record Config
No SD card detected
Record
Cam
Record
Record Off
Record When Alarms
Record All Day
Timing Record
Cancel
Format

① To set the record mode for the sd card. Please check details from ⑥-⑨.

② To set the resolution for the sd card video. The higher quality of the video and the more space it need for the sd card.

③ To set the time length of each video file. Like every 3 minutes for a video file.

④ To set up record audio also.

⑤ To turn on loop recording, make it continuously record.

⑥ Stop recording in sd card

⑦ To set the sd card only record when any motion detected.

⑧ To set the sd card record all day loop recording.

⑨ To set the sd card record in certain period of time. Like 7am-5pm.

Q: How to set up the night vision light?

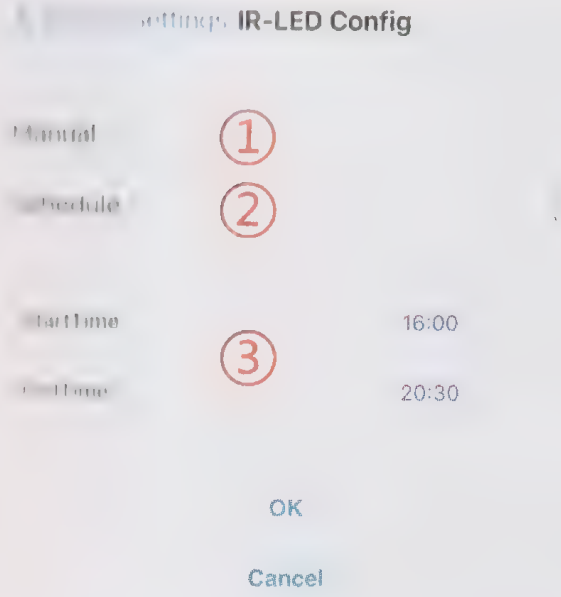

① You can set the night vision up manually in the live video. The button is like a light.

② You also can set the night vision light in schedule.

③ The start and end time need to be 24 hours format. For example, you want to set the night vision to be on From 6 pm to 6 am. Then you need to put in start time 18:00 and end time 06:00.

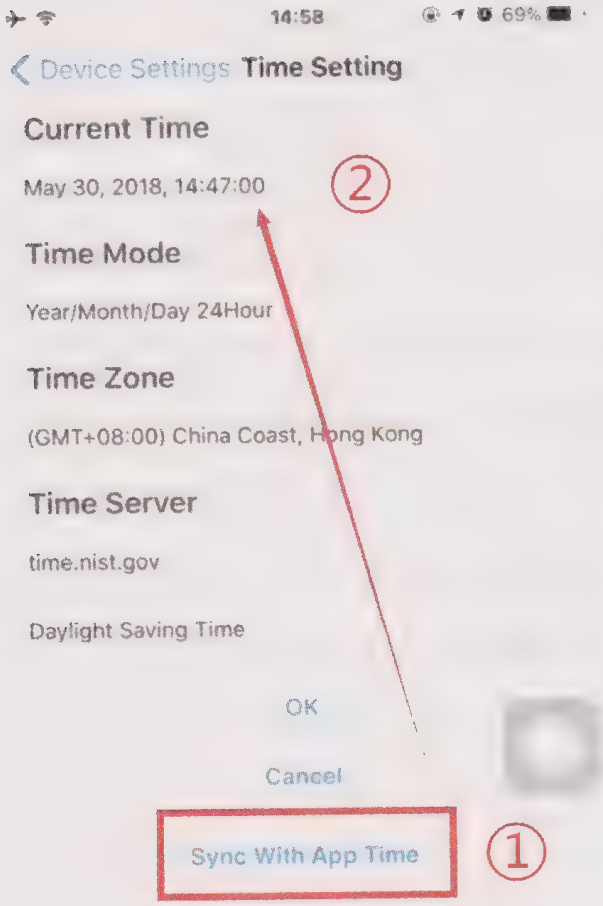

When you press ① Sync with App Time,

the time ② and ③ will be the same.

PC INSTRUCTION MANUAL

IMPORTANT: Please connect with your phone first,and help your camera to connect with your home WiFi through Phone APP.
Make sure that you camera had been connected with your home WiFi.
1.Open the Website: http://www.szbvcam.com/
2.Download the software and install it.

Android

iphone iOS

windows

MAC

For example: Windows
Step 1: download the software
Step 2: Install the software
Step 3: Open the software and input the information

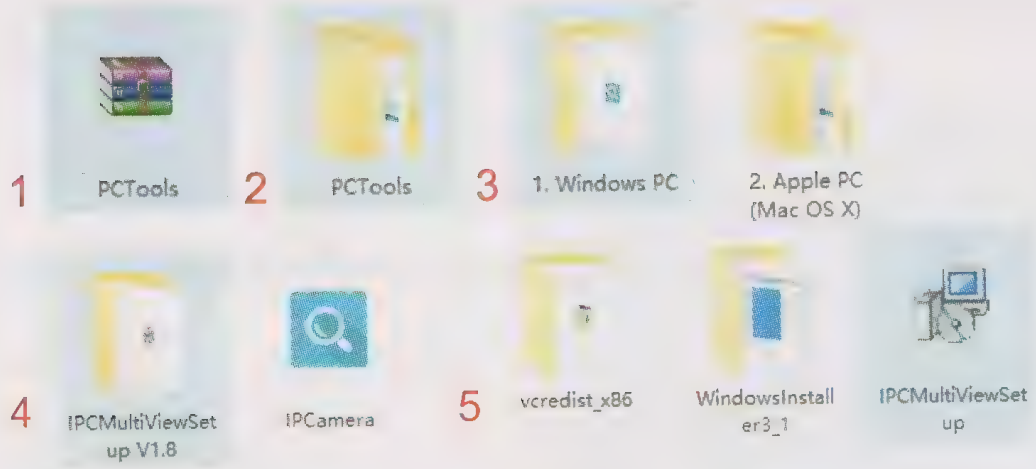

3.Click the “IPCMultiviewSetup”and install it on your PC.

4.Open the software like below.

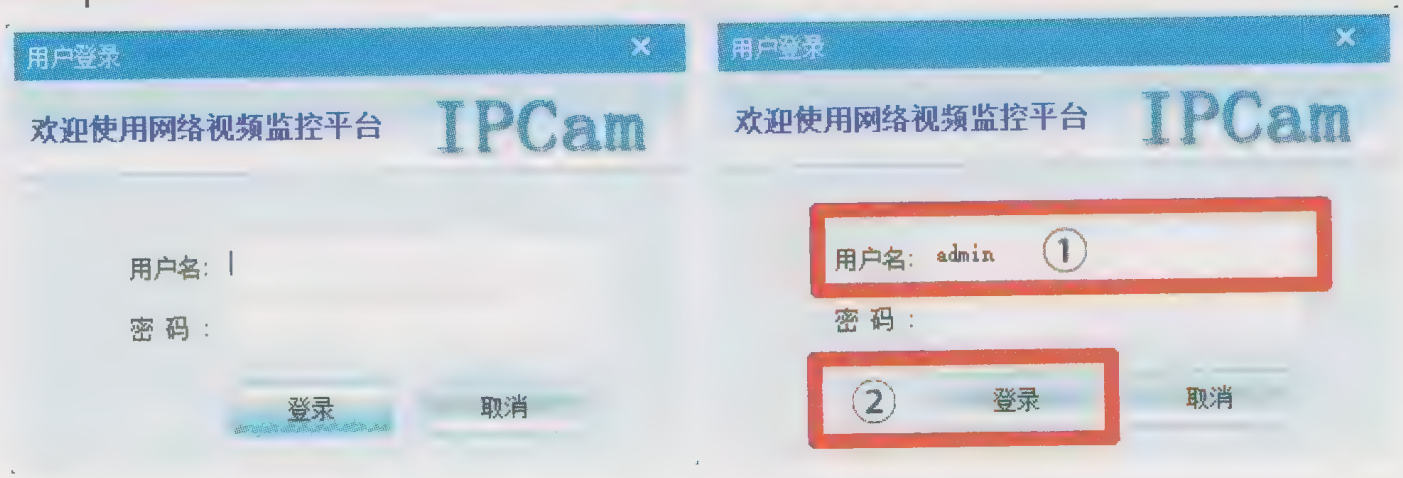

① input “ admin ”　② Click the button

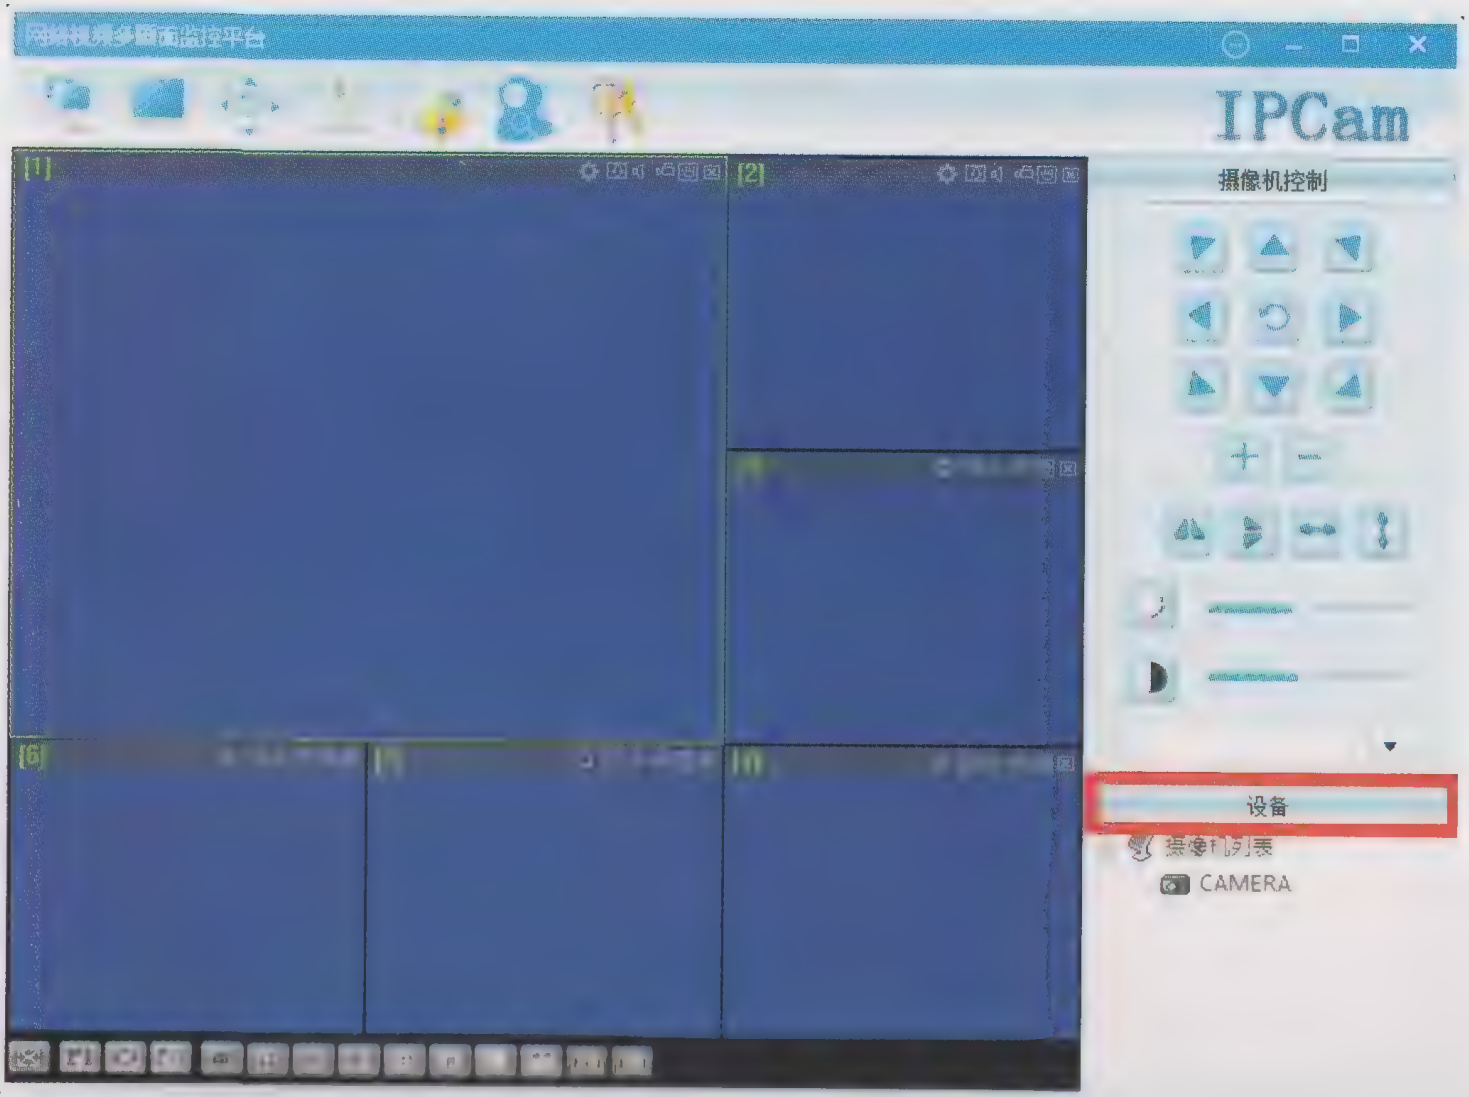
IPCam
摄像机控制
设备
CAMERA

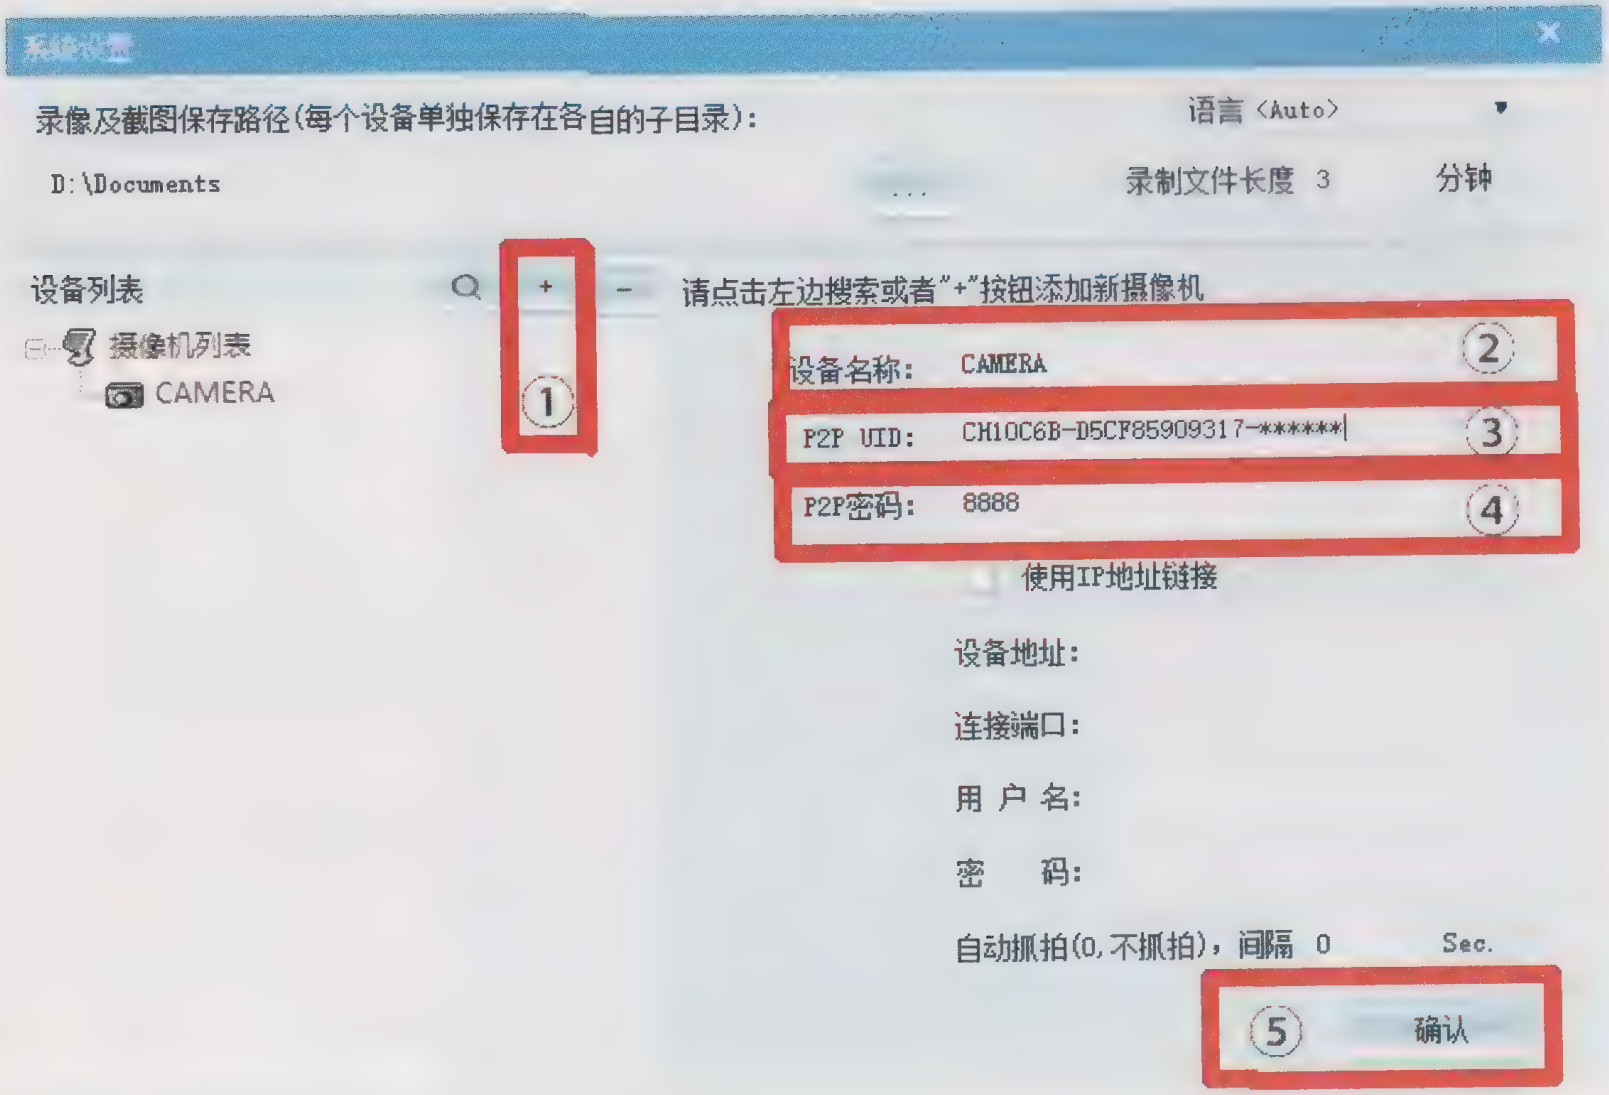
录像及截图保存路径(每个设备单独保存在各自的子目录):
D:\Documents
语言 〈Auto〉
录制文件长度 3 分钟
设备列表
+
-
请点击左边搜索或者"+"按钮添加新摄像机
摄像机列表
CAMERA
1
设备名称: CAMERA
2
P2P UID: CH10C6B-D5CF85909317-******
3
P2P密码: 8888
4
使用IP地址链接
设备地址:
连接端口:
用 户 名:
密 码:
自动抓拍(0,不抓拍), 间隔 0 Sec.
5
确认

① Directly click the button to add the camera

② input the name as you want

③ P2P UID:It is on the bottom of the Camera.Beginning with "CMA6FD-F9789C43A029-..."

④ input the camera original password: 8888 (if you change the password ,please input the new password.)

⑤ Directly click the button. You will directly watch the live video.

Questions & Answers

Q: How to set the correct time on the clock.

A: You need to set the time on the clock itself, there are “SET” and ”PLUS” to help you correct the time. Also you can switch the 24/12 hours format. The app time settings “SYNC with APP time” is only correct the time in the video. Not for the clock time.

Q: Doe your company provide any teaching video for how to use this camera?

A: Yes, we have guiding video on youtube. Links below.
For IOS: bit.ly/MCSTREEZ3
For Android: bit.ly/MCSTREET4
For PC: bit.ly/MCSTREEC3

Q: When the first time I try to connect the camera with my phone, I could not find the camera wifi in my cellphone wifi settings, what should I do?

A: Anytime when you try to connect your cellphone with the camera, and you could not find the camera wifi in your cellphone wifi list. You need to reset the camera to the original setting. Restart again, the camera wifi will show up.

Q: How to reset the camera?

A: The reset button is on the back side of the camera with a letter "RST", press it for 5-10 second with a tiny stuff like pen. After that, the 2 working lights will be off and on again after few seconds, that means the camera is successfully reset to the original setting.

Q: What is the original password for this camera?

A: The original password is 8888. You can also change a new password with it.

Q: What should I do if my house wifi network does not show up in the APP wifi list?

A: Go to the APP "Device settings" to "wifi comfig" then at the bottom of the wifi list, you will see "other network" select it and enter the name and password of your house wifi. Make sure the information that you type in is 100% correct. If not, it will take forever to connect.

Q: What if I enter the wrong password of my house wifi ?

A: If you type in the wrong wifi password, the camera will stay offline forever. At this point, you need to reset the camera to the beginning settings. The reset

button is on the back side of the camera with a letter “R”, press it for 5-10 second with a tiny stuff like pen. After you reset it, reconnect again with the camera.

Q: Does the motion detection record video too?
A: No, the motion detection only take snapshoot when any motion detected. And the snapshoot will be saved in the APP library.

Q: How is the sd card work?
A: Once you inert the sd card in the camera and it is on, the camera will start recording automatically. The video can be stored to micro sd card, you can also playback video from micro sd card via app, and you can download video from micro sd card to your phone. And the maximum take 64GB

Q: What are the full specs of the video format (framerate, bitrate, codec, file extension used, etc...)?
A: Video format: mp4. framerate: about 12FPS. bitrate:above 200kbps. depending on current network

Q: Why does the video will be 1-2 seconds delay showing on my phone?
A: After you connect the camera to the internet, the fluency of the video is depended on the network.

Q: How long the battery work after it is fully charged.
A: Not for so long, about 1 hour, if you want this camera work for 24/7, you should keep charging it. After you plugged in, the camera also can work without battery.

If you have any problem or issue with the camera. Please contact us 619-722-5557. We will do whatever It takes to make you happy.